


# ET-05A校音器产品使用说明书



## 1. 产品示意图

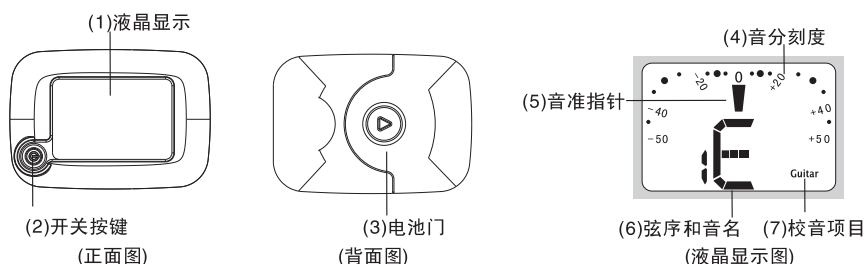

## 2. 按键功能及操作方法

| 按键操作方法 | 短按                                                                              | 长按3秒 |
|--------|---------------------------------------------------------------------------------|------|
| ⏻ 按键功能 | 选择校音项目: Chromatic, Guitar, Guitar Flat b, Guitar Flat bb, Bass, Violin, Ukulele | 开/关机 |

- 安装好电池后，长按 ⏻ 按键3秒，即可开机或者关机。
- 短按 ⏻ 按键，校音项目将在Chromatic, Guitar, Guitar Flat b, Guitar Flat bb, Bass, Violin, Ukulele, 即在十二平均律，吉他，贝司，小提琴，夏威夷四弦琴之间循环切换。
  - 按照以上方法，将机器设置到您所需要的校音项目。
  - 将机器的夹子夹在乐器振动明显的位置上，调整显示屏的角度到易于观察的位置。
  - 使乐器发声产生振动，机器会显示音名并指示音高，指针偏左且显示屏亮白色时，音偏低；指针偏右且显示屏亮白色时，音偏高；指针居中且显示屏亮绿色时，音准确。
- 开机后，系统自动进入校音状态，A4=440HZ。此后，每次关机，系统将记下关机前画面，下次开机时，自动进入关机前画面。

## 3. 参数

A4频率: 440Hz  
校音项目: Chromatic(十二平均律), Guitar(吉他), Bass(贝司), Violin(小提琴), Ukulele(夏威夷四弦琴)  
吉他降半音选择: b, bb  
校音范围: A0(27.5Hz)-C8(4186Hz)  
电池规格: CR2032  
尺寸: 55×38×32 mm

## 4. 注意事项

- 校音器长时间存放在以下环境中可能会引起损坏:
  - 长时间日光直射
  - 高温或潮湿处
  - 腐蚀的环境
  - 靠近强磁场的地方
- 避免挤压、摔打，勿大力操作。
- 请用干净、柔软的干布保养产品，不得使用水或者其他化学液体来保养产品。
- 在使用过程中如果出现功能异常，请取出电池30秒后，再重新装入。
- 屏幕显示暗淡时，请更换电池。
- 长期不使用机器时，应取下电池。

### 深圳市伊诺乐器有限公司

地址: 深圳市坪山新区汤坑路家德马峦工业园一区七栋1-3楼  
售后服务电话: 0755-89930937  
[Http://www.eno-music.com/](http://www.eno-music.com/)

### 合格证


产品执行标准号:  
Q/ENO 001-2017  
检验员: \_\_\_\_\_  
检验日期: \_\_\_\_\_  
本品经过检验合格, 准予出厂

尺寸: 145\*210MM  
材质: 70G 双胶纸  
工艺: 单色印刷 正反面

# ET-05A USER MANUAL



## 1. Product illustration

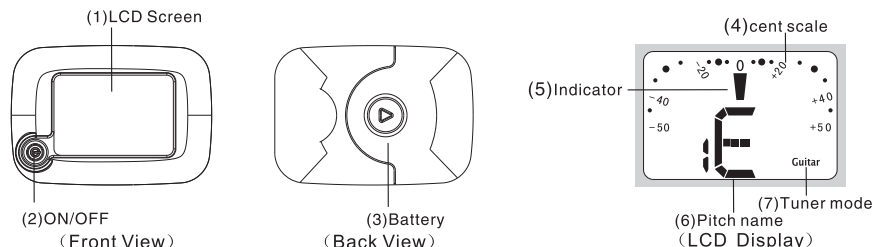

## 2. Button functions and operations:

| Operation | Press slightly                                                                                | Heavy press for 3 seconds |
|-----------|-----------------------------------------------------------------------------------------------|---------------------------|
| Functions | Tuning items selection(Chromatic,Guitar,<br>Guitar Flat b,Guitar Flat bb,Bass,Violin,Ukulele) | On power/Off power        |

- After installing the battery, press button for 3 seconds, the machine will be on or off.
- Press button slightly, tuning items will be switched repeatedly between Chromatic,Guitar,Guitar Flat b, Guitar Flat bb,Violin,Bass,Ukulele
  - You could select the items you require to be tuned.
  - Position the tuner by clip on the part of musical instrument which vibrates distinctly, adjusting the tuner until you can see LCD display clearly.
  - Low: indicator is on the left, showing White  
High: indicator is on the right, showing White  
In-tune: indicator is on the middle, showing Green  
Remarks: the string number and note name show on the screen together when tuning
- It enters into the tuning status automatically, after turn on the machine. A4=440HZ. The machine will record the last status, when turning off the machine. Once re-starting the machine, the last status will appear again.
- In the state of power-on, the machine will be off automatically, when no button operation or signal inputting within 3 minutes.

## 3. Technical specifications:

A4 frequency 440Hz  
 Tuning items:Chromatic,Guitar,Bass,Violin,Ukulele  
 Tuning range: A0(27.5Hz)~C8(4186Hz)  
 Flat for tuning Guitar:b,bb  
 Battery: CR2032  
 Size: 55×38×32 mm

## 4. Notice

- Long time exposure to the following places will lead to the damage of the machine:
  - exposure under the sunlight
  - high temperature or humid situation
  - erosive circumstance
  - close to the magnetic place
- Avoid rough handling and heavy operation.
- Please use clean and soft fiber to maintain the machine, no use of water or chemical liquid.
- If the machine is in abnormal status during the operation, get out off the battery for 30 seconds, afterwards install it again.
- When the display is not clear, change the battery with a new one.
- Please take the battery out when not use for a long time.

### ENO MUSIC CO.,LTD

Address:1-3 Floors, 7th Building, Jiademaluan Industrial Estate, Tangkeng Road,  
 Pingshan District, Shenzhen, Guangdong, China  
 Http://www.eno-music.com/ E-mail: info@eno-music.com