 


ET 3000W 产品使用说明书



感谢您购买我们的产品，请在使用前仔细阅读此说明书。

1. 产品示意图

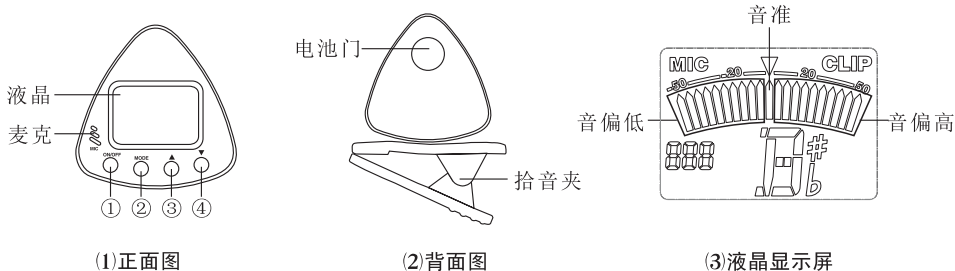

2. 按键功能及操作方法

按键	① ON/OFF	② MODE	③ ▲	④ ▼
短按	CLIP-MIC	C, F, B \flat , E \flat	A4频率增加	A4频率减少
长按	开/关机		A4频率连续增加	A4频率连续减少

短按ON/OFF键选择拾音方式。选择“MIC”时，请将麦克风与发音部位尽量靠近。选择“CLIP”时，请将校音器用拾音夹固定在乐器震动较明显的位置，并旋转校音器调整视角。

3. 参数

校音方式：麦克风 (MIC)、拾音夹 (CLIP)

A4频率：430-450Hz

校音模式：十二平均律 (C)

校音调式：C, F, B \flat , E \flat

校音范围：0G#-8C#

校音误差： ≤ 1 音分

体积：53*80*43 (mm)

电池：CR2032

重量：53g

 
4. 注意事项

- 校音器长时间存放在以下环境中可能引起损坏：
 - 长时间日光直射
 - 高温或潮湿处
 - 腐蚀的环境
 - 靠近强磁场的地方
- 避免挤压、摔打，勿大力操作。
- 请用干净、柔软的干布保养产品，不得使用水或其他化学液体来保养产品。
- 在使用过程中如果出现功能异常，请取出电池30秒后，再重新装入。
- 屏幕显示暗淡时，请更换电池。
- 长期不使用校音器时，请取出电池。


ET 3000W USER MANUAL

Thanks you purchasing our products,please read this manual carefully before using your new tuner.


1.Product Interface

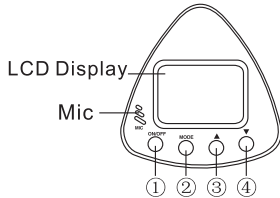

 (1)Front

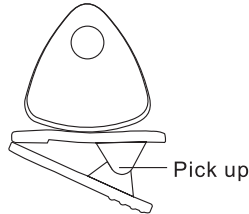

 (2)Back

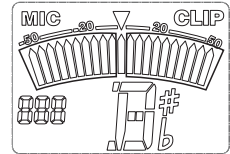

(3)LCD Display

2.Button Functions & Operations

Button	①ON/OFF	②MODE	③▲	④▼
Short press	CLIP-MIC	C,F,B \flat ,E \flat	A4 frequency adjusting	
Long press	ON/OFF			

Notice: When selecting mode "MIC", pay attention that the part producing sound to be as close to mic as possible. When selecting mode "CLIP", positioning the tuner by clip on the part which vibrates distinctly, adjusting the tuner until you can see the LCD display clearly.

3.Specifications

Pick up mode: MIC/CLIP
 A4 frequency adjusting: 430-450Hz
 Tuning mode:Chromatic
 Key:C,F,B \flat ,E \flat (under chromatic mode)
 Range:0G#-8C#

Tolerance:≤1Cent
 Volume: 53*80*43(mm)
 Battery:CR2032
 Weight:53g

4. Precautions:

- Long time exposure to the following places will lead to the damage of the machine:
 - exposure under the sunlight
 - high temperature or humid situation
 - erosive circumstance
 - close to the magnetic place
- Avoid rough handing and heavy operation.
- Please use clean and soft fiber to maintain the machine, no use of water or chemical liquid.
- If the machine is in abnormal status during the use,take out of the battery for 30seconds,afterwards install it again.
- When the display is not clear,change the battery to a new one.
- Please take the battery out when not use for a long time.