



# ET-37 校音器使用说明书




## 1. 产品示意图

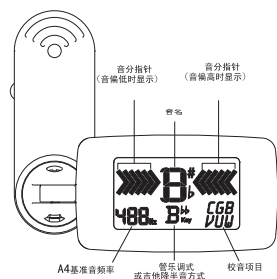

(正面示意图)

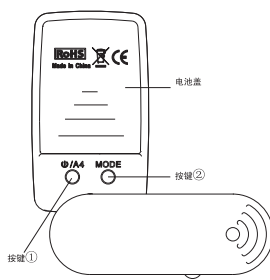

(背面示意图)

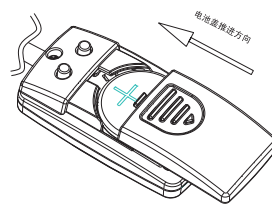

(电池安装图)

## 2. 按键功能及操作方法

1. 安装 参照电池安装图的方法，将电池安装好，即可开机。如果不能正常开机，请长按按键①约3秒来启动开机。
2. 设置校音项目 短按按键②可以设置校音项目，包括C(十二平均律)，G(吉他)，B(贝司)，V(小提琴)，U(尤克里里)和W(管乐)。
3. 设置调式 在W(管乐)模式下，长按按键②可以设置调式，包括C,F,Bb,Eb四种调式。
4. 降半音调音 在G(吉他)模式下，长按按键②可以选择两种降半音调音方式，即**b**，**bb**。
5. 设置A4基准音频率 短按按键①可以设置A4基准音频率，范围是430Hz-450Hz。
6. 调音
  - ①按照以上设置方法，将机器设置好后，即可用于调音。将机器的夹子夹在乐器琴头或者其他振动明显的位置上，调整显示屏的角度以利于观察。
  - ②音偏低时，音名左侧显示音分指针，背光橙色；音偏高时，音名右侧显示音分指针，背光橙色；音准确时，不显示任何指针，背光绿色。
7. 关机 长按按键①约3秒可以关机。
8. 电池更换 当液晶显示屏显示暗淡时，表明电池电量已不足，请及时更换电池。

## 3. 参数

校音项目：C(十二平均律)，G(吉他)，B(贝司)，V(小提琴)，U(尤克里里)，W(管乐)  
A4基准音频率：430Hz-450Hz  
吉他降半音调音：**b**，**bb**  
管乐调式：C,F,Bb,Eb

校音范围：A0(27.5Hz)-C8(4186Hz)  
尺寸：89×53×18.5mm  
电池规格：CR2032

## 4. 注意事项

1. 校音器长时间存放在以下环境中可能会引起损坏：
  - a. 长时间日光直射
  - b. 高温或潮湿处
  - c. 腐蚀的环境
  - d. 靠近强磁场的地方
2. 避免挤压、摔打，勿大力操作。
3. 请用干净、柔软的干布保养产品，不得使用水或者其他化学液体来保养产品。
4. 在使用过程中如果出现功能异常，请取出电池30秒后，再重新装入。
5. 屏幕显示暗淡时，请更换电池。
6. 长期不使用机器时，应取下电池。

### 深圳市伊诺乐器有限公司

地址：深圳市坪山新区汤坑路家德马峦工业园一区七栋1-3楼  
售后服务电话：0755-89930937  
[Http://www.eno-music.com/](http://www.eno-music.com/)

### 合格证


产品执行标准号：  
Q/ENO 001-2017  
检验员：  
检验日期：  
本品经过检验合格，准予出厂

尺寸：145\*210MM  
材质：70G 双胶纸  
工艺：单色印刷 正反面

# ET-37 USER MANUAL



## 1. Product Illustration

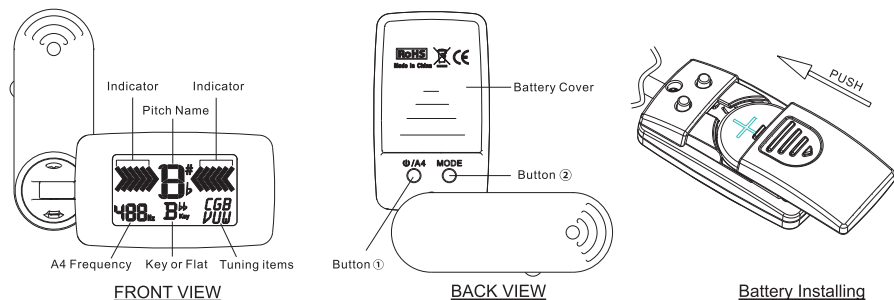

## 2. Button functions and operations

### 1. Installing

After installing the battery, it will be on automatically. If not, please press button ① for three seconds to power on the unit.

### 2. Setting the tuning mode

Press button ② slightly, you could choose different tuning mode including C(Chromatic), G(Guitar), B(Bass), V(Violin), U(Ukulele) and W(Wind instrument).

### 3. Setting the key

Under the W mode tuning mode, press button ② to select the note including C, F, Bb, Eb four different key.

### 4. Flat tuning mode

Under the guitar tuning mode, press button ② to select flat *b* or *bb*.

### 5. Setting the A4 frequency

Press button ① could set A4 frequency, 430Hz-450Hz adjustable.

### 6. How to tune

- (1). After setting the tuner well, please clip the tuner on the part of instrument which vibrates distinctly, adjusting the tuner until you could see the screen clearly.
- (2). Flat: Indicator is on the left, the backlight is orange;  
Sharp: Indicator is on the right, the backlight is orange;  
In tune: No indicator is showed on the screen, the backlight is green.

### 7. Turn off

The tuner will be off automatically, if there is no button operation or signal inputting within 3 minutes.

### 8. Replace battery

When the display gets dim, please replace a new battery in time.

## 3. Specification

Items of tuning : C(Chromatic), G(Guitar), B(Bass), V(Violin), U(Ukulele), W(Wind instrument)  
A4 frequency: 430Hz-450Hz      Flat: *b*, *bb*      Key: C, F, Bb, Eb  
Tuning range: A0(27.5Hz)-C8(4186Hz)      Battery: CR2032      Size: 89\*53\*18.5mm

## 4. Notice

1. Long time exposure to the following places will lead to the damage of the machine:  
a. exposure under the sunlight      b. high temperature or humid situation  
c. erosive circumstance      d. close to the magnetic place
2. Avoid rough handling and heavy operation.
3. Please use clean and soft fiber to maintain the machine, no use of water or chemical liquid.
4. If the machine is in abnormal status during the operation, get out of the battery for 30 seconds, afterwards install it again.
5. When the display is not clear, change the battery with a new one.
6. Please take the battery out when not use for a long time.

## ENO MUSIC CO., LTD

Address: 1-3 Floors, 7th Building, Jiademaluan Industrial Estate, Tangkeng Road,  
Pingshan District, Shenzhen, Guangdong, China  
Http://www.eno-music.com/      E-mail: info@eno-music.com